

LIMA ELECTRONIC 2" RISING VESSEL SINK SOAP DISPENSER CHROME FINISH INSTALLATION INSTRUCTIONS




BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.


Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.


POSSIBLE TOOLS REQUIRED*

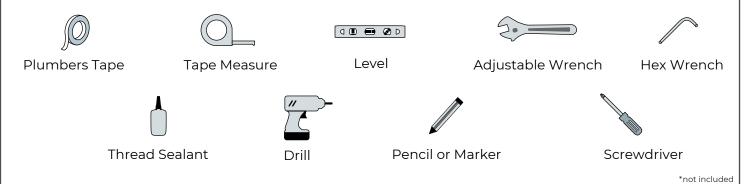


| Specification | |
|-----------------------------|---|
| Product Type: | Commercial |
| Main Construction Material: | Brass |
| Mount Type: | Deck |
| Soap Pump: | 6 Volt Noise-Free |
| Power: | 4 (D) Batteries / AC Adapter Optional |
| Batteries Required: | 4 (D) Batteries (not supplied) |
| Number of Tap Holes: | 1 |
| Sensor type: | Active Infrared, Self-Adjusting |
| Sensing Range: | Adjustable with optional remote control |
| Sensing Range: | 0 +8cm |
| Working Soap: | Standard liquid Soap. |
| Soap Bottle Capacity: | 800ML (Just Under a quart) |
| Soap Amount Per Use: | 0.5ML to 1.5ML, adjustable |

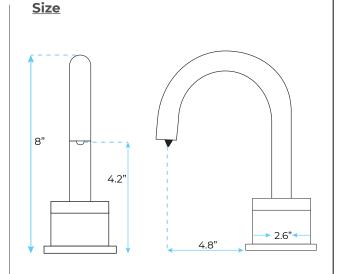

Deck Mount Installation

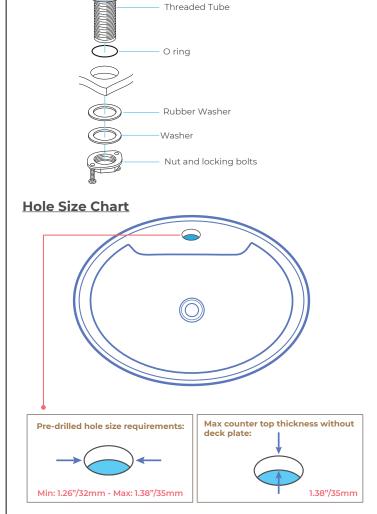


Faucet Body

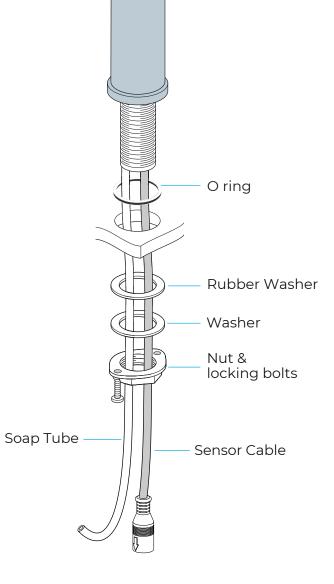


All dimensions and specifications are nominal and may vary. Use actual products for accuracy in critical situations.

Installation Method

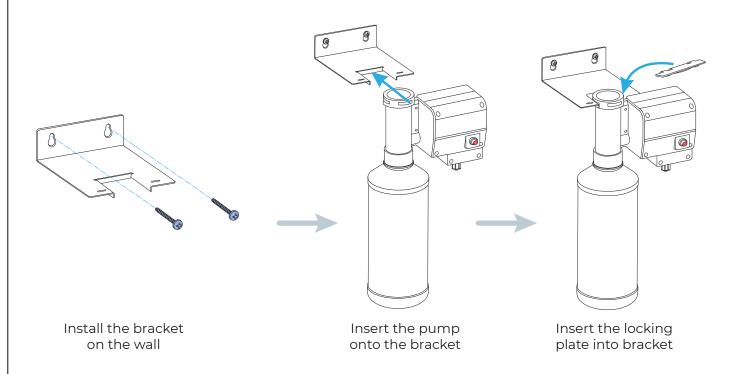

Soap Refill Process

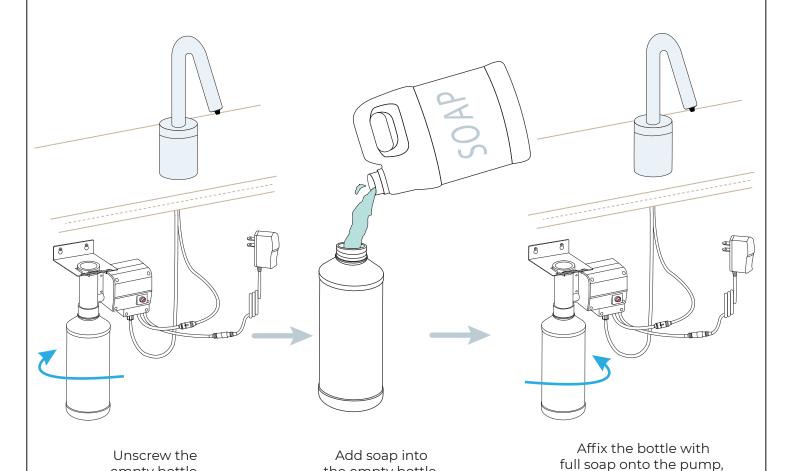


empty bottle.


and do not over tighten.


the empty bottle.


Deck Mounted Faucet 0 **Battery Box** Battery case Battery case cover 0 Screws Batteries

  
- 1. Remove cover of battery case.
- 2. Install four (4) D size alkaline batteries. Note: Make sure the batteries are installed in correct orientation (polarity).
- 3. Replace battery case cover.
- 4. Tighten screws.
- The standard life cycle time is 2 years, based on average use 2000 times/month.

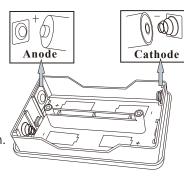

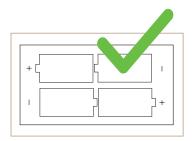


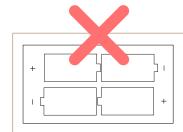







Usage

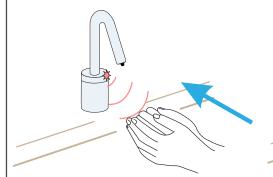

 




Predetermined amount of soap will dispense

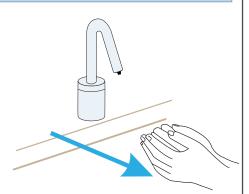

If more soap is needed, remove hands & repeat.

Usage of Button

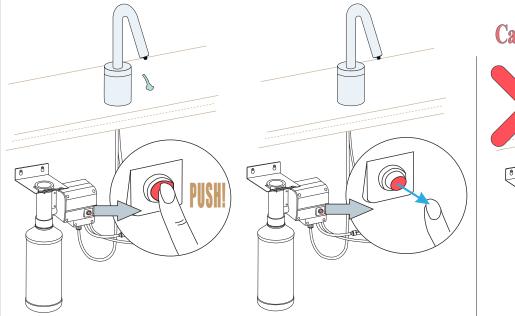

When the soap bottle is filled with soap, press the button till soap dispenses out of nozzle.



Do not use the sensor when the button is pressed, because they cannot be used at the same time, as it might lead to the damage to the machine.



Commissioning Sequence

Before using the soap dispenser for the first time the following sequence must be carried out.

Fill the bottle full of soap.

Locate the dispense button on the side of the pump. Press and hold the button until soap is dispensed from the spout. This will ensure the dispenser tube and cable are full of soap.

Operation

Place the hands under the spout within the sensing

Once the users' hands have been detected a small amount of soap will be dispensed from the spout into the users' hands.

 
General Information

 
Our sensor soap dispensers have a non-touch control which uses infrared sensing technology to detect human presence. Once detected, the spout instantly dispenses soap and automatically stops once the user moves their hands away to eliminate unnecessary wastage, whilst creating a more hygienic washroom solution.

 
All products manufactured and supplied by Fontana are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected.

Sensor Faucet & Soap Dispneser Installation

Incorrect Installation







Installing electronic soap dispenser & faucet with intersecting centerline might lead to accidental activation of either or both.

Correct Installation







Care & Cleaning

- · Wipe away any debris adhering to the spout or sensor.
- · Wipe away debris with a damp cloth containing a suitable amount of a neutral, dishwashing detergent. Then wipe clean with a damp cloth.
- · When cleaning around the sensor, please be careful not to scratch the surface of the sensor window.
- · Do not use detergent that might damage the surface of spout. These include:
- · Detergents containing acid, chlorine bleach or
- · Detergents that are coarse granules in nature, such as polishing powder.
- · Solvents such as paint thinner or benzene.
- · Abrasive aids such as nylon scrubbers/brushes, steel wool. etc.



Hygienic

The proximity sensor removes the need to touch the spout body, reducing the spread of germs and reducing the chance of cross infection.

For more details, visit the product page:

